



DIAMOND

EVENT & TENT

LIBERTY BLUETOOTH 2-Speaker w/Battery + MP3 + CD

LOCATIONS

SALT LAKE CITY
4518 South 500 West
801-262-2080

OREM
1350 Sandhill Road
801-222-9311

OGDEN
1639 South 1900 West
801-393-5353

Supplies Needed	1
Options	2
Requirements	3
Operation	4
Strike Down	5
Capacity	6
Tips	7

Volume # 2013-A
Document Property of
Diamond Event & Tent ©

SUPPLIES

- Main Speaker with Amplifier & Controls
- Power Cord
- Companion Speaker
- Companion Speaker Cable - 25'
- One Hand Held Corded Microphone
- Mic Cable - 20'
- MP3 Player Cable
- Two Speaker Stands
- Speaker Stand Bag
- Two Road Cases



Speaker Cable Plug

Sample Photo / Actual Sound System Style May Vary.

TIPS

- Place the system speakers on tripods in front of the person speaking to avoid feedback squelches.
- If using the battery and the Charging Status is low (Red Light), the battery must be charged. Plug unit into a 120 Volt power source to charge/use.

OPTIONS

- Hand Held Corded Mic with Mic Cord
- Wireless Hand Held Mic 1-CH1
- Wireless Hand Held Mic 2-CH5
- Wireless Lapel Mic 1-CH1
- Wireless Lapel Mic 2-CH5
- Heavy Duty Extension Cord - 50' or Less

OPERATION INSTRUCTIONS

1. Place speaker stands 10-20 feet apart.
2. Elevate speakers onto stands and secure with locking pin.
3. Set all Input Levels to the minimum and tone controls to their 12:00 position.
4. Plug the mic cable into the MIC 1 jack.
5. Plug extra mic cable into MIC 2 jack.
6. Plug mic cable into the small LINE-IN jack.
7. Plug any other audio source into the LINE-IN jacks.
8. Plug companion speaker's cable into

- the back of the Companion Speaker and the Speaker Output Jack on the Main Speaker.
9. If using a wireless mic, push the red button until lit to turn on.
 10. Turn power on (GREEN LED above the switch will light)
 11. Slowly increase Level Controls of the active Input Jacks to the desired volume.
 12. Adjust the Bass & Treble Controls for the desired sound quality.

WARNING! - Do not raise the volume beyond 75% of the maximum capacity.

CAPACITY

- 2 Mics (Corded or Wireless Microphones)
- Built-In CD Player
- 500-750 People Inside
- 250-500 People Outside (Actual performance will vary by conditions.)
- 100' Bluetooth Range

REQUIREMENTS

- Fully Charged Battery or 120 Volt / 5 Amp Power Source

STRIKE DOWN

- Turn Volume Down
- Turn power off
- Unplug system
- Disconnect the companion speaker
- Wrap up cables
- Return to Road Cases

BLUETOOTH

1. Turn Bluetooth volume knob on.
2. Press "Pairing" Button (Blue Light will Flash).
3. On your device, find and select "Anchor Audio" to connect.
4. Pairing Button light will stop flashing