



Supplies Needed	1
Options	2
Requirements	3
Operation	4
Strike Down	5
Capacity	6
Tips	7

Volume # 2015-A
Document Property of
Diamond Event & Tent ©

LIBERTY MP3 2-SPKR BATTERY

SUPPLIES

- Main Speaker with Amplifier & Controls
- Power Cord
- Companion Speaker
- Companion Speaker Cable - 25'
- One Hand Held Corded Microphone
- Mic Cable - 20'
- MP3 Player Cable
- Two Speaker Stands
- Speaker Stands Bag
- Two Road Cases



Speaker Cable Plug

Sample Photo / Actual Sound System Style May Vary.

OPTIONS

- Hand Held Corded Mic with Mic Cord
- Heavy Duty Extension Cord - 50' or Less

REQUIREMENTS

- Fully Charged Battery or 120 Volt / 5 Amp Power Source

STRIKE DOWN

- Turn power off
- Unplug system
- Disconnect the companion speaker
- Wrap up cables

TIPS

- Place the system speakers in front of the person speaking to avoid feedback squelches.
- If using the battery and the LED flashes or does not light, the battery must be charged. Plug unit into a 120 Volt power source to charge/use.

CAPACITY

- 2 Mics (Corded or Kit)
- 500-750 People Inside
- 250-500 People Outside (Actual performance will vary by conditions.)

LOCATIONS

SALT LAKE CITY
4518 South 500 West
801-262-2080

OREM
1350 Sandhill Road
801-222-9311

OGDEN
1639 South 1900 West
801-393-5353

OPERATION INSTRUCTIONS

1. Place speakers 10-20 feet apart.
2. Set all Input Levels to the minimum and tone controls to their 12:00 position.
3. Plug the mic cable into the MIC 1 jack.
4. Plug extra mic cable into MIC 2 jack.
5. Plug any other audio source into the LINE-IN jack.
6. Plug companion speaker's cable into the back of the Companion Speaker and the Speaker Output Jack on the Main Speaker.
7. Turn power on (Red LED above the switch will light)
8. Slowly increase Level Controls of the active Input Jacks to the desired volume.
9. Adjust the Bass & Treble Controls for the desired sound quality.