


Parts	1
Optional Items	2
Requirements	3
Symbols	4
Operation	5
Cable Types	6
Helpful Hints	7

MULTI-MEDIA PROJECTOR

- ### PARTS
- Projector
 - Carrying Case
 - Power Cable
 - RCA Audio/Video Cable (Red/White/Yellow Ends)
 - VGA Video Cable (Blue Rectangle Ends)
 - USB Cable (Standard & Mini Ends)
 - HDMI Cable (Chrome Rectangle Ends)
 - Quick Start Manual



Sample Photo / Actual Multi-Media Player Style May Vary.

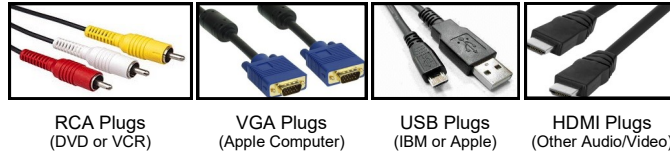

- ### OPTIONAL ITEMS
- Extension Cord
 - Movie Screen

- ### REQUIREMENTS
- 120 Volt / 3 Amp Power Source

- ### SYMBOLS
-  Power
 -  Menu
 -  Source
 -  Volume
 -  Auto Image
 -  Keystone
 -  Help

- ### OPERATION INSTRUCTIONS
1. Connect the power cord to the projector and to an outlet.
 2. Slide open the lens cover (tab above lens).
 3. Touch the power light button.
 4. Wait 5-10 sec. for the power light to stop blinking and turn green.
 5. Turn on your media source (computer or other).
 6. You may need to press a specific key combination on your computer to activate your computer's external video port.
 7. On most laptops hold down the FN key while pressing a key labeled CRT/LCD/ or LCD/VGA, a monitor icon or similar. (See helpful hints for specific model key combinations.)
 8. If this does not work, restart your computer. (Make sure the projector is connected and on.)
 9. Press the source button to change if needed.
 10. Use front release button to adjust the height as needed.
 11. Use Keystone buttons to make picture square.
 12. Zoom in/out to focus.
 13. When finished, before unplugging, press the power button until it blinks.
 14. When the power button turns off, the fan will stop. It is safe to unplug unit.
 15. See Manual for more info.

Volume # 2013-A
Document Property of
Diamond Rental ©

- ### HELPFUL HINTS
- Diagonal Screen Sizes
 60" @ 6.5'-7.5' Away
 80" @ 8.5'-10.5' Away
 90" @ 9.5'-11.5' Away
 150" @ 16'-20' Away
- Laptop Export Port Keys
 Apple = F7
 Compaq = Fn+F4 or F6
 Dell = Fn+F8
 Fujitsu = Fn + F10
 HP = Fn+F4 or F6
 IBM ThinkPad = Fn+F7
 Sony = Fn + F7
 Toshiba = Fn+F5

- ### TROUBLE SHOOTING
- See Product Manual.
 - If you have any additional problems or concerns, please call your local Diamond Event Party Location.

LOCATIONS

SALT LAKE CITY
 4518 South 500 West
 801-262-2080