

COTTON CANDY MACHINE

PARTS / SUPPLIES

- Base unit with Motor, Spinner Head and two (2) Leather Float-
- Round Floss Pan
- Floss Pan Netting
- Six (6) Netting Clips
- Optional Floss Pan **Bubble Cover**
- Extension Cord (10-12 gauge, 50' or less)
- Cotton Candy Cones
- Sugar Floss Mix (Blue or Pink)

REQUIREMENTS

• 120 Volt / 10 Amp

SET-UP

- Level Table / Surface
- Dedicated Power Circuit within 50 Feet
- Dry Area / No Water Near the Spinner Head

Cotton Candy Machine w/Floss Pan











Transport Screws Style

Sample Photo / Actual Cotton Candy Machine Style May Vary.

OPERATION INSTRUCTIONS

- Either loosen the two transportation nuts and push down to release the motor head OR pull the transport handle down if unit with large handle to release the motor head.
- Check to make sure 2. the spinner head has the two leather floater heads attached.
- 3. Place the floss pan on top of the motor.
- Install the netting around the outer edge of the floss pan.

- Secure the netting using the six clips.
- Pour your Sugar Floss into the spinner on top of the motor.
- Plug unit into power source / outlet.
- Turn on the motor by pressing the Master button "On".
- Adjust the heat to a lower setting and press the Heat button "On".
- 10. After a few minutes adjust the heat to a middle heat setting.
- 11. You are ready to begin!

Parts / Supplies 1 Requirements 2 Set-Up 3 Operation 4 Clean-Up 5 **Making Floss** 6 Locations

Volume # 2013-A **Document Property of Diamond Rental ©**

LOCATIONS

SALT LAKE CITY

4518 South 500 West 801-262-2080

CLEAN-UP

- When finished, run out all remaining floss until empty.
- Turn heat knob up to highest setting for 60 seconds.
- NEVER place water in the floss head.
- Unplug machine.
- Use a damp cloth to wipe off the floss head.
- · Dry all parts if needed.

MAKING FLOSS













Roll more floss onto the cone.



Serve!