

Parts	1
Optional Items	2
Trouble Shooting	3
Operation	4
Clean-Up	5
Propane Leaks?	6
Location	7

GRIDDLE PROPANE

Volume # 2013-A
Document Property of
Diamond Rental ©

- PARTS**
- Griddle
 - Griddle Stand
 - Two Drip Pans

- OPTIONAL ITEMS**
- Propane Tank w/Fuel
 - Grill Gun / Lighter
 - Grilling Spatula
 - Grilling Tongs
 - Griddle Brick (cleaning)
 - Chafer Pans

- TROUBLE SHOOTING**
- Inspect fuel rods under the griddle to make sure they did not shift during transportation.

- CLEAN-UP**
- Remove any/all food
 - Use 1/4 cup of table salt to scrub griddle.
 - Or splash with water to deglaze the griddle.
 - Use griddle brick to scrub stubborn parts.
 - Run burner(s) until griddle is dry of any/all moisture.
 - Turn off control knobs and tank main valve.
 - Disconnect Propane Tank




FOR OUTDOOR USE ONLY!

Sample Photo / Actual Griddle Style May Vary.

- PROPANE LEAKS?**
- Always test for leaks. Apply soapy water with a brush the connections. Open the main cylinder valve. If bubbles appear, and further tightening of the connector does not eliminate the leak, close main cylinder valve and call a qualified propane your Diamond Rental representative. If system is free of leaks, light burners and check for a clean blue flame.

OPERATION INSTRUCTIONS

1. Make sure that the folding stand legs are locked.
2. Place the griddle feet securely atop the griddle stand.
3. Place the propane tank so that the hose is free and not kinked in any way.
4. Connect the hose with regulator to the propane tank and tighten threads.
5. Test the propane tank for a leak.
6. Check all control valves are closed.
7. Open the main propane tank valve and allow 2-5 min. for propane to fill fuel line.
8. Hold a lit butane gun next to a burner and turn the control knob to the open position.
9. The front burner should ignite and the other burners should ignite shortly.
10. Adjust the control knobs to the desired temperature.
11. Cooked foods can be place within a chafer pan, covered and set upon the griddle plate to keep items warm.

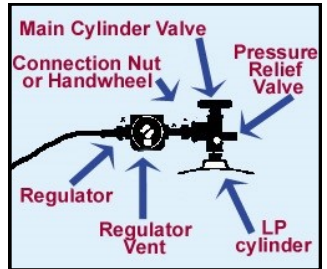

LOCATIONS

SALT LAKE CITY
4518 South 500 West
801-262-2080