

Parts	1
Optional Items	2
Requirements	3
Consumption	4
Multiple Tanks	5
Operating Instruct.	6
Shutting Down	7

Volume # 2013-A
Document Property of
Diamond Rental ©

HEATER 080K BTU BOX HEATER

- PARTS**
- Heat Box Heater
 - Thermostat
 - Metal Diffuser Unit

- OPTIONAL ITEMS**
- Propane Tank(s)
 - Gallons of Propane
 - Multiple Tank Manifold
 - Heavy Duty Extension Cord (10-12 Gauge / 50' or Less)


- REQUIREMENTS**
- 120 Volt / 1.5 - 5 Amp Power Source
 - Propane Fuel Source
 - Flat and stable space parallel to the structure you are heating.

CONSUMPTION

- .73 Gallons Per Hour

MULTIPLE TANKS

Average Temp.	Quantity Tanks
60	1
50	1
40	1
30	2
20	2
10	2
0	2
-10	2

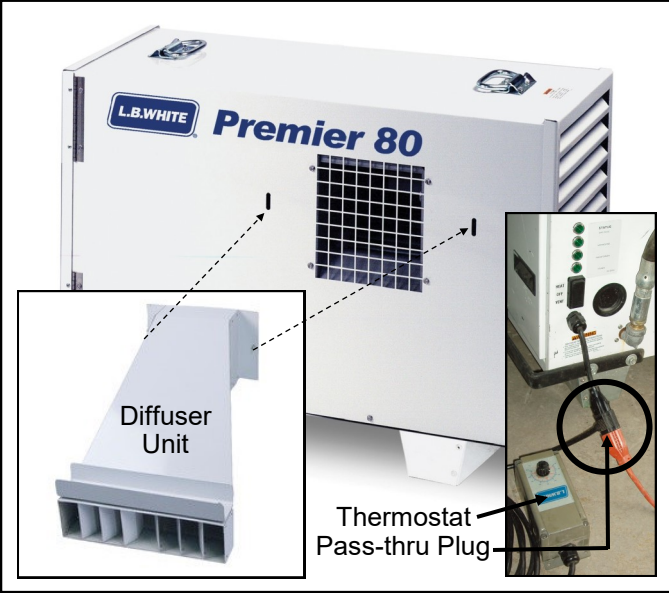

Sample Photo / Actual Heater Style May Vary.

OPERATION INSTRUCTIONS

1. Place the unit on a flat, stable space away from any flammable materials.
2. Attach the metal diffuser unit or end diffuser unit with hose, by sliding the tabs into the slots on the wall of the heater unit.
3. Place the tent wall inside the channel on top of the diffuser unit.
4. Securely connect the propane tank to the propane hose, or to the manifold, if more than one tank is being used per heater.
5. Plug the thermostat pass-thru plug into the heater's power plug.
6. Place the thermostat in a convenient location at an average height.
7. Plug the pass-thru plug into an extension cord and the cord into a power source.
8. Open the propane tank valve and test for any gas leaks.
9. Push the selector switch to "HEAT".
10. Allow the unit 30-60 seconds to ignite and produce heat.
11. Adjust the thermostat to the desired temperature.

SHUTTING DOWN

- Close Supply Valve
- Burn off excess propane
- Turn the thermostat dial all the way down.
- Push the selector switch to the "OFF" position
- Disconnect heater from it's propane and electrical supplies.

TROUBLE SHOOTING

- If you have any problems or concerns, please call your local Diamond Event Party Location.

LOCATIONS

SALT LAKE CITY
4518 South 500 West
801-262-2080