

# INFRARED PATIO HEATER

# **SUPPLIES**

- Patio Heater
- Reflector Top
- 5 Gal. Propane Tank (Typically provides 8-10 hours of heat.)
- Propane Fuel
- **Optional Black** Tuxedo Cover

## **REQUIREMENTS**

- · Outdoor Use Only
- · 4' from Walls
- 2' from Ceiling

# 34 1/2"Diameter Reflector 24" Side Clearance Radiant Emitter Grid Pilot Lighting Hole Spark Ignition Heater Head Basi 93" High Pining Assembly Decorative Cove Post Socket Assembl Quick Connect Hose 0000000000

Sample Photo / Actual Patio Heater Style May Vary.

# **SET-UP**

Level Surface

### CLEAN-UP

- When done, turn the control knob to the "OFF" position.
- Turn "Off" the propane tank when done using.
- If windy, place in a safe location away from the wind.

# **OPERATION INSTRUCTIONS**

- 1. Connect propane tank to regulator.
- 2. Using your hand, firmly secure the regulator to the propane tank.
- 3. Push in and rotate control knob to "PILOT" position.
- 4. Continue to hold/ depress control knob for 30-60 seconds.

NOTE: Allow 1.5 minutes to purge air through pilot after connection with a new tank of propane gas.

- 5. Insert a lit match or lighter through 1/2" lighting hole above the control knob.
- 6. The pilot light should remain lit.
- 7. Turn the control knob to the "On" position.

NOTE: Wait 5 minutes after shutting off heater before re-lighting.

Supplies Needed	1
Requirements	2
Set-Up	3
Operation	4
Clean-Up	5
Trouble Shooting	6
Locations	7

Volume # 2013-A **Document Property of** Diamond Event ©

### TROUBLE SHOOTING

### PILOT WON'T LIGHT

- \* Air in Gas Line
- \* Low Gas Pressure
- \* Gas Line Turned "Off"
- \* Blockage in Gas Line

## PILOT WON'T STAY LIT

- Bad Thermocouple
- Corrosion of thermo couple contact
- Bad Valve
- \* Wind Exceeding 10 mph

#### **BURNER WON'T LIGHT**

- Low Gas Pressure
- Blockage in Orifice
- Manual Valve not in the "On" position.

If you have any problems or concerns. please call your local Diamond Event Party Location.

### LOCATIONS

SALT LAKE CITY 4518 South 500 West 801-262-2080